






### automatic oil burners

#### BURNER SELECTION

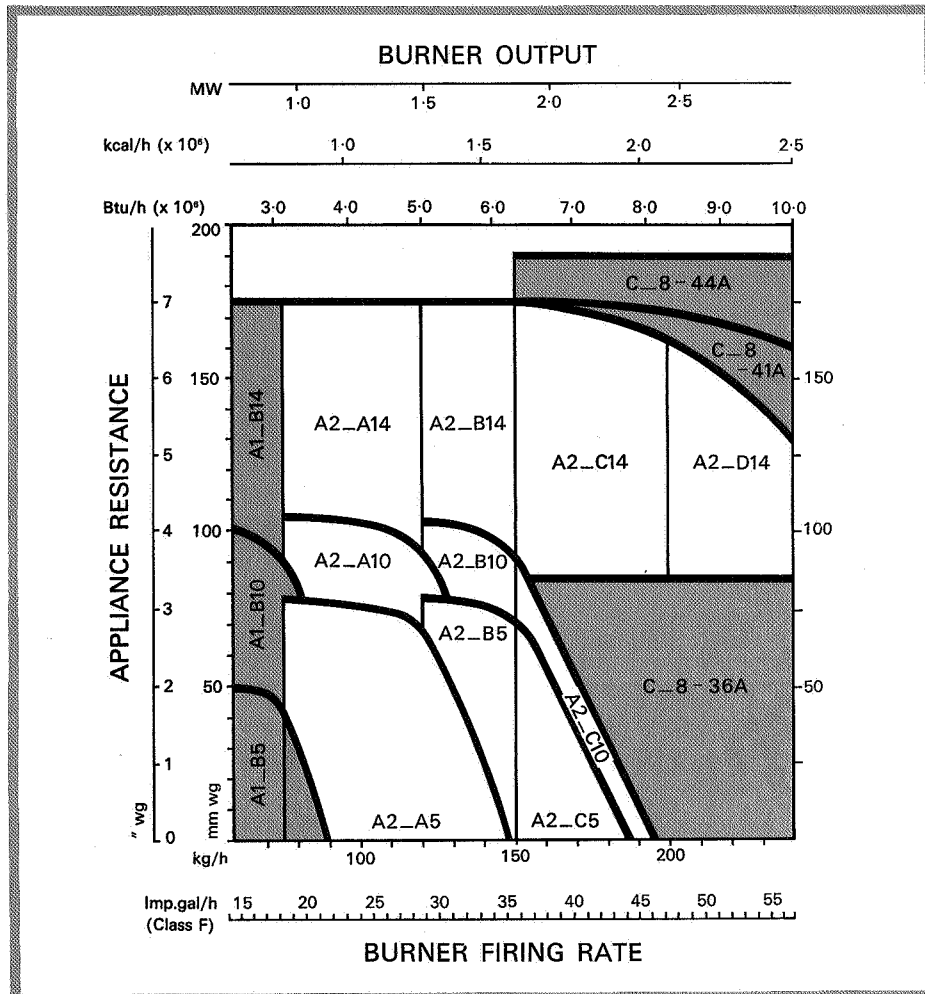

#### ORDERING INFORMATION

When ordering Nu-way model A2 burner please specify the following information

Make of appliance and serial number if known, with which the burner is to be used.

Rating of appliance

Specification of electricity supply locally available, i.e., voltage, frequency, and whether single or three phase, (3 or 4 wire).

Type of oil fuel

This graph is a guide for burner selection only. For advice on individual applications please consult the Technical Department. For full information on the burner types in the shaded areas, please refer to the respective Technical Data Sheet.

#### ELECTRICAL DATA

Burner Model	BURNER WITHOUT PRE-HEATER						BURNER WITH PRE-HEATER		
	Motor		Start current A/phase	Run current A/phase	Cable size (mm <sup>2</sup> )	HRC fuse (A)	Pre-heater (kW)	Cable size (mm <sup>2</sup> )	HRC fuse (A)
hp	kW								
A2-A5	3.0	2.2	25	4.6	1.5	15	6	2.5	25
10	4.0	3.0	35	6.1	1.5	20	6	4	30
14	5.5	4.0	45	8.0	2.5	25	6	4	30
A2-B5	4.0	3.0	35	6.1	1.5	20	6	4	30
10	5.5	4.0	45	8.0	2.5	25	6	4	30
14	5.5	4.0	45	8.0	2.5	25	6	4	30
A2-C5	4.0	3.0	35	6.1	1.5	20	7.5	4	30
10	5.5	4.0	45	8.0	2.5	25	7.5	4	40
14	7.5	5.5	40	11.5	2.5	20	7.5	6	30
A2-D14	10	7.5	60	14.4	4	25	9	10	40

All data calculated at 415 volts. All motors are 2 pole, 2800 rpm.

**Nu-way Heating Plants Limited**  
Droitwich WR9 8NA, England

Telephone: Droitwich (09057) 2331 & 2527  
Telex: 338551 Cables: JASNU DROITWICH



Nu-way policy is one of continuous improvement. The right to change prices and specifications without notice is reserved.

